




The MAS by JABEPRODE™ is provided by Raw Mellifera Ltd for distribution in the United Kingdom. Any enquiries, please refer to contact details at the end of this document.



BUILDING INTRUCTIONS MAS


Thank you for taking part in the preventive, selective and effective control of the Asian hornet.

You have just received your JABEPRODE Selective Access Modules (MAS). The MAS consist in two cones and are the main parts allowing the building of your Selective and Autonomous Trap for Asian Hornets (*Vespa velutina*). They must always be mounted in pairs. To facilitate shipments, the MAS come in a kit composed of twelve elements (2x6 in total for two cones) plus two optional anti escape caps that can be clipped together:

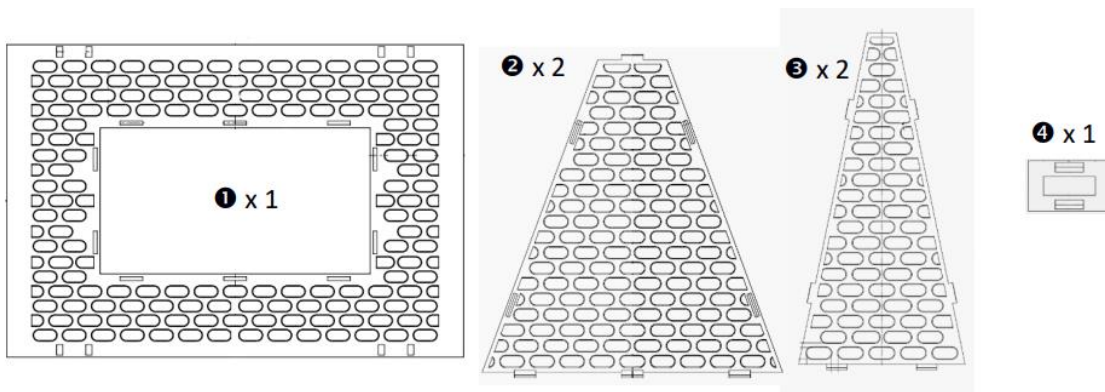

This technical sheet aims to help you build the MAS easily and quickly.

Here is a front view and a top view of the cone once completely built:

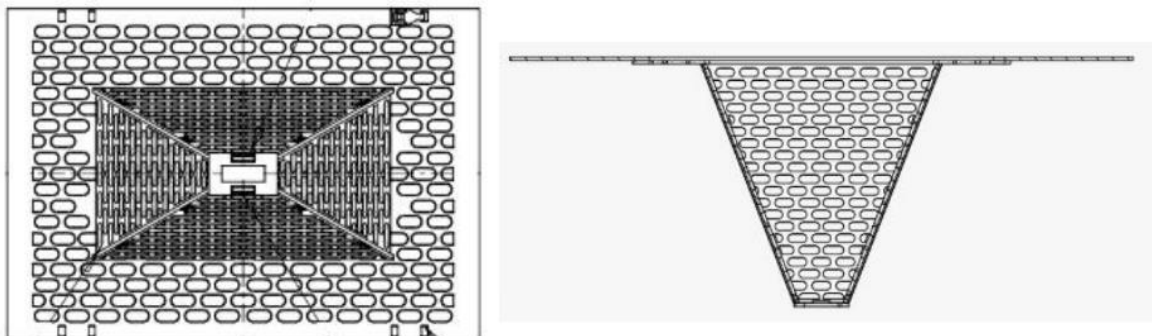

1 – Place the plate (1) (large plate) on a flat surface. Make sure that the embossed inscription "JABEPRODE" is at the top of the plate.

2 – Fix the three clips of the **FIRST** large trapeze (2) in the three notches of the plate (longer side of the plate).

IMPORTANT: All clips must be positioned towards the outside of the cone.

3 – Clip the **FIRST** small trapeze (3) onto the plate, the shorter side having two notches.

4 – To assemble the trapezoids together, clip the small trapezium into the notches of the large trapezium.

Make sure to match the clips to the notches and angle them slightly. Do not hesitate to force if necessary.

5 – Take the **SECOND** large trapeze (2) and clip its base to the plate. Then insert the clips of the small trapezium in the notches.

6 – Clip the **SECOND** small trapeze (3) onto the plate.

7 – To assemble all the sides, clip the last small trapeze in the notches of the two large trapezoids (2 notches on each side of the plate, four in total).

8 – Clip the small rectangular inlet reducer (4) to the end of the cone. The hollowed-out parts of this small plate facing upwards.

9- Repeat the process for the second cone.

10 – Optional: for added security, you can now clip the extra caps at the end of each cones, this would prevent any escape attempts by any AH queens.

The MAS is then complete, ready to be fitted on the capture box and fixed by rivets, nails, screws, polyurethane, or neoprene glue.

Contact and Enquiries:

Raw Mellifera Ltd, 55 Castlehaven Close SN15 3TG Chippenham, United Kingdom

Website: www.rawmellifera.co.uk

Phone: (+44) 07462897203

Email: raw.mellifera@yahoo.com

For any individual order of the MAS, please go on the website to order directly. For any bulk order (50 kits minimum) please do Email us with your requirement. Please allow 30 to 45 days delivery delay due to international shipping. All orders to be paid upfront.